



DALI Cockpit – ARM based PC


1. go to DALI Cockpit file location:

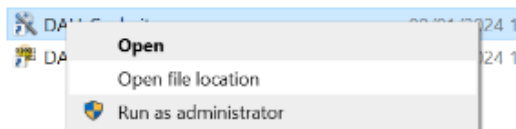

2. open "Properties"

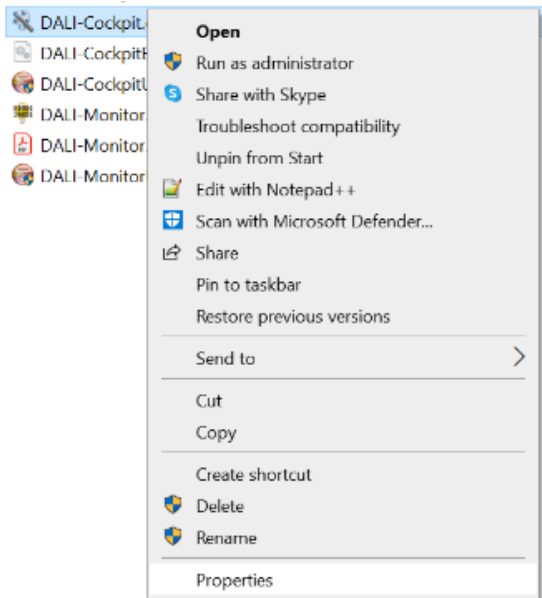

3. On tab "Compatibility" select checkbox "run this program in compatibility mode for windows 8"

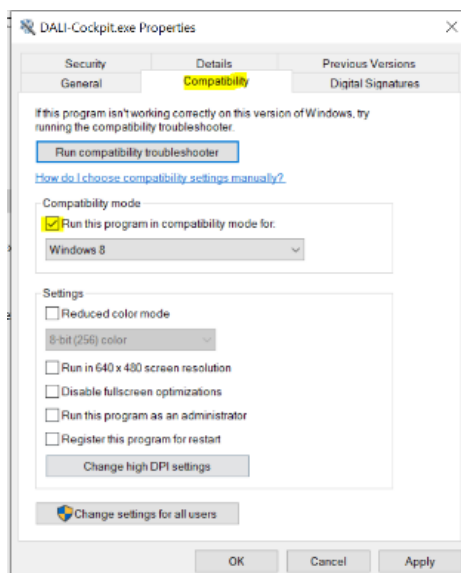

4. since you are on ARM System there should be another option not available in the image above called "Windows ARM Emulation" - open and select "secure Emulation"

